



# User Manual

LSUM 032R4C 0250F EA



# User Manual

## CONTENT

<b>1. Overview</b> .....	<b>04</b>
<b>2. Unpacking</b> .....	<b>05</b>
<b>3. Safety</b> .....	<b>05</b>
<b>4. Identification of features</b> .....	<b>06</b>
<b>5. Module to module connection</b> .....	<b>07</b>
<b>6. Output terminal connection</b> .....	<b>08</b>
<b>7. Maintenance</b> .....	<b>09</b>
<b>8. Contact Information</b> .....	<b>10</b>
<b>Appendix I</b> .....	<b>11</b>

# User Manual

LSUM 032R4C 0250F EA

## 1. Overview

The LS 32.4V / 250F Ultracapacitor Module has high energy and low ESR to meet energy storage and power delivery requirements.

The cells used in the module have 2.7 V maximum voltage rating and are connected in series to get higher operating voltage of modules. To meet the long cycle life requirements, the cells operate under 2.7V. In addition, all the cells are balanced by balancing circuit connected parallel to each cell.

# User Manual

## LSUM 032R4C 0250F EA

### 2. Unpacking

Inspect the shipping carton for signs of damage prior to unpacking the module. Damage to the shipping carton or module should be reported to the carrier immediately.

Remove the module from the shipping carton and retain the shipping materials until the unit has been inspected and is determined to be operational.

**NOTE:** The original shipping materials are approved for both air and ground shipment. The module should be removed from the shipping carton by lifting the body of the module.

### 3. Safety



Do not operate above specified voltage.

Do not operate above specified temperature rating.

Do not touch terminals with conductors while charged. Serious burns, shock, or material fusing may occur.

Protect surrounding electrical components from incidental contact.

Provide sufficient electrical isolation when working above rated voltage.

Prior to installation and removal from the equipment, it is mandatory to fully discharge the module.

# User Manual

LSUM 032R4C 0250F EA

## 4. Identification of features

- Product Image




<Fig. 1> Product Image

# User Manual


## LSUM 032R4C 0250F EA

### 5. Module to module connection

- There are series and parallel connection for High power

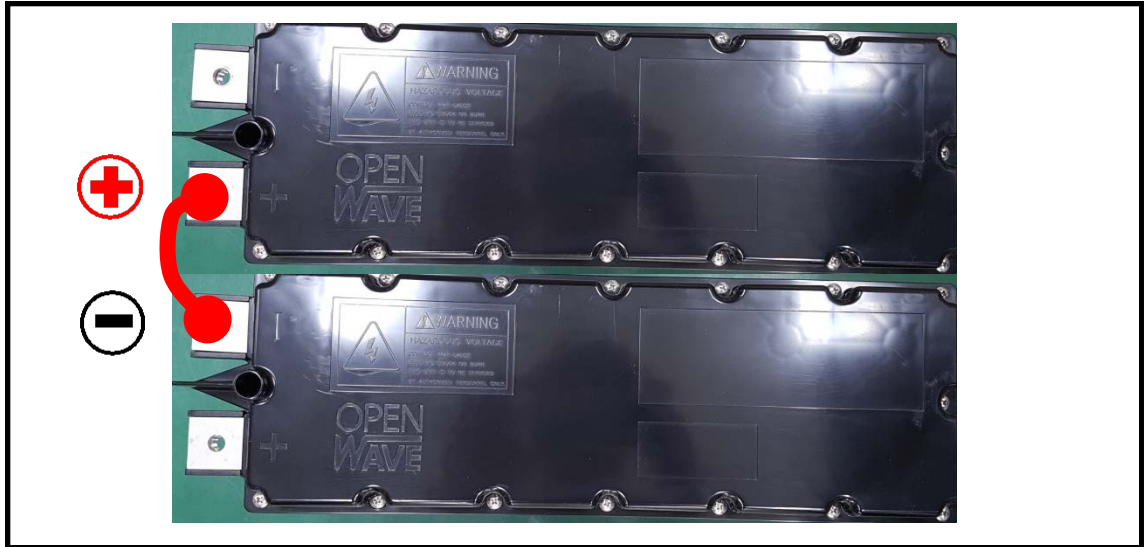

<Fig. 2> Series Connection of Modules

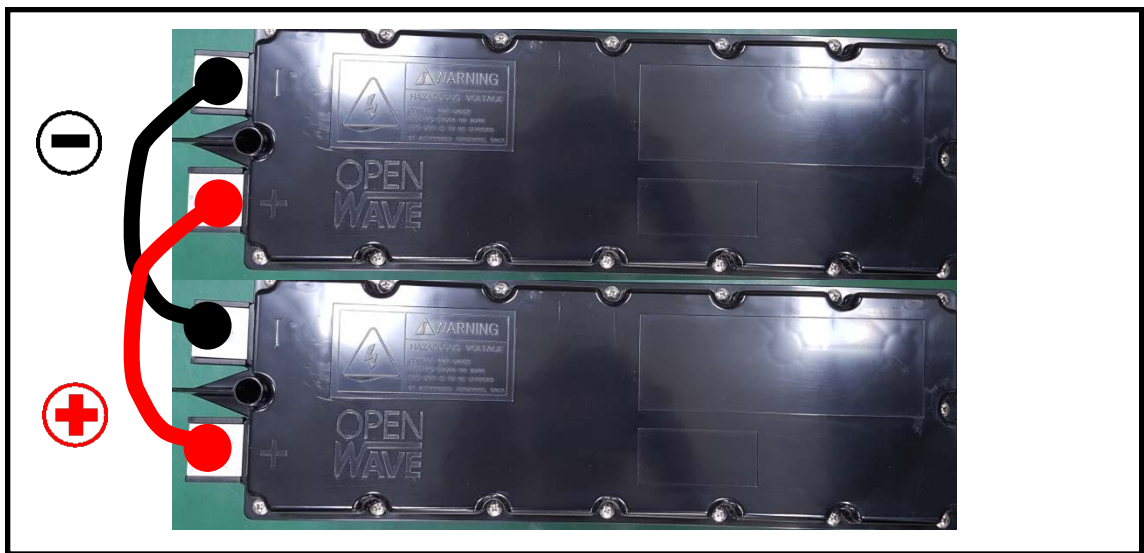

<Fig. 3> Parallel Connection of Modules.

# User Manual

LSUM 032R4C 0250F EA

## 6. Output terminal connection

The LS 32.4V / 250F Ultracapacitor Modules are designed to connect directly to a ring or a bus bar. The positive and negative terminals have each hole for the screw. Two terminals threaded size is M8 and wave washers are required to ensure long term, reliable connections.

When tightening the terminal bolt, a torque of 20 N-m for the M8 bolt should be used. Because the modules have a very low ESR, total ESR will be affected by a ring lug, bus bar or torque. Therefore, it needs more attention to assemble the modules. And appropriate protection and sealing should be used on both module terminals to avoid shock hazards and corrosion.

# User Manual

LSUM 032R4C 0250F EA

## 7. Maintenance

### Power Rating

If the applied voltage is over rated voltage, charging the module should be stopped. And the allowable low voltage level of the module depends on the user's requirements, but full discharging to 0V does not affect the module performance.

### Temperature

The module has its optimal operating temperature range of -40 to 65. Over 70°C, charging and discharging should be stopped to expect its performance and life cycle.

### Do not expose to direct sunlight

For installation do not make the module expose to direct sunlight due to temperature increase inside the module.

### Maintenance

The module has its expected life cycle over 10years at rated voltage and +25°C. However the life cycle of the module may be decreased in high temperature condition or over voltage charging.

If following abnormal module performances are detected, operation should be stopped and checking the electrical & mechanical connections is recommended.

- Monitoring high temperature in normal operating conditions
- Internal resistance increase or initial voltage drop increase
- Deformation of the module case



# User Manual

LSUM 032R4C 0250F EA

## 8. Contact Information

LS Ultracapacitor

LS Mtron

6F, LS Mtron Hi-Tech Center, 39, LS-Ro, 116beon-gil, Dongan-gu, Anyang-si,  
Gyeonggi-do 431-831, Korea

Tel. +82-31-8045-9579

Fax. +82-31-8045-9544

E-mail. [ultracapacitor@lsmtron.com](mailto:ultracapacitor@lsmtron.com)

# User Manual

LSUM 032R4C 0250F EA

## Appendix I

### Drawing

