



# User Manual

LSUM 162R4L 0015F EA



# User Manual

## CONTENT

1. Overview .....	03
2. Unpacking .....	04
3. Safety .....	04
4. Identification of features .....	05
5. Module to module connection .....	06
6. Output terminal connection .....	07
7. Monitoring system .....	08
7-1. Alarm signal .....	08
7-2. Alarm connector .....	09
8. Mounting .....	10
9. Maintenance .....	11
10. Contact Information .....	12
Appendix I .....	13

# User Manual

## LSUM 162R4L 0015F EA

### 1. Overview

The LS 162.4V / 15F Ultracapacitor Module has high energy and low ESR to meet energy storage and power delivery requirements.

The cells used in the module have 2.8 V maximum voltage rating and are connected in series to get higher operating voltage of modules. To meet the long cycle life requirements, the cells operate under 2.8V. In addition, all the cells are balanced by balancing circuit connected parallel to each cell.

# User Manual

LSUM 162R4L 0015F EA

## 2. Unpacking

Inspect the shipping carton for signs of damage prior to unpacking the module. Damage to the shipping carton or module should be reported to the carrier immediately.

Remove the module from the shipping carton and retain the shipping materials until the unit has been inspected and is determined to be operational.

**NOTE:** The original shipping materials are approved for both air and ground shipment. The module should be removed from the shipping carton by lifting the body of the module.

## 3. Safety



Do not operate above specified voltage.

Do not operate above specified temperature rating.

Do not touch terminals with conductors while charged. Serious burns, shock, or material fusing may occur.

Protect surrounding electrical components from incidental contact.

Provide sufficient electrical isolation when working above rated voltage.

Prior to installation and removal from the equipment, it is mandatory to fully discharge the module.

# User Manual

LSUM 162R4L 0015F EA

## 4. Identification of features

- Product Image



<Fig. 1> Product Image

# User Manual

LSUM 162R4L 0015F EA

## 5. Module to module connection

- There are series and parallel connection for High power



<Fig. 2> Series Connection of Modules



<Fig. 3> Parallel Connection of Modules.

# User Manual

LSUM 162R4L 0015F EA

## 6. Output terminal connection

The LS 162.4V / 15F Ultracapacitor Modules are designed to connect directly to a ring terminal. The positive and negative terminals have each hole for the screw. Two terminals threaded size are M6.

When tightening the terminal bolt, a torque of 6 N-m for the M6 bolt should be used. Because the modules have a very low ESR, total ESR will be affected by a ring lug, bus bar or torque. Therefore, it needs more attention to assemble the modules. And appropriate protection and sealing should be used on both module terminals to avoid shock hazards and corrosion.


# User Manual

LSUM 162R4L 0015F EA


## 7. Monitoring system

### 7-1. Alarm signal & reset

If UC module exceeds voltage or temperature setting level, alarm signal will activate which allows client system to monitor properly UC module state. Pin-out of connector is below.

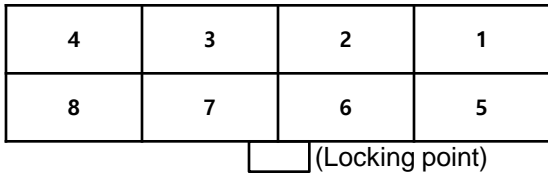

<Fig. 4> Alarm connector

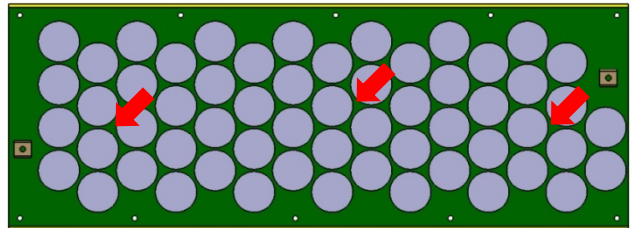






<Fig. 5> Thermistor point  
(3 point per unit module, total 6 point)

Pin no.	Pin name	Pin out	Remarks
1	VC	If cell shows charged voltage higher than 2.7V and continued for 10 seconds, it will give a alarm signal.	Normal state: pin 1-6 short Alarm state: open
2	VA	If UC module shows charged voltage higher than 168.2V and continued for 10 seconds, it will give a alarm signal.	Normal state: pin 2-6 short Alarm state: open
3	TC	If there is any over temperature detected(higher than 60℃) at least one of 6points temperature sensors and continued for 10 seconds, it will give a alarm signal.	Normal state: pin 3-6 short Alarm state: open
4	TA	If there is any over temperature detected(higher than 70℃) at least one of 6points temperature sensors and continued for 10 seconds, it will give a alarm signal.	Normal state: pin 4-6 short Alarm state: open
5	LV	N/A	Always pin 5-6 short
6	RTN	Signal return line	
7	BC	N/A	Always open
8	NC		





# User Manual

## LSUM 162R4L 0015F EA

LED	state
	12V↑, no alarm signal(normal state)
	alarm ON(over temperature or over voltage)
 → 	Automatic return to normal state when alarm status is canceled
	12V↓

### 7-2. Alarm connector

- The mating monitoring connector is not included.
- Connector manufacturer: Molex


	LS Ultra Capacitor Module side	Customer System side
Image		
Part No.	5559-08P	5557-08R, 5557-08R-210, 5557-08R-BL

# User Manual

LSUM 162R4L 0015F EA

## 8. Mounting

The modules should not be mounted in locations where they are directly exposed to the environment.

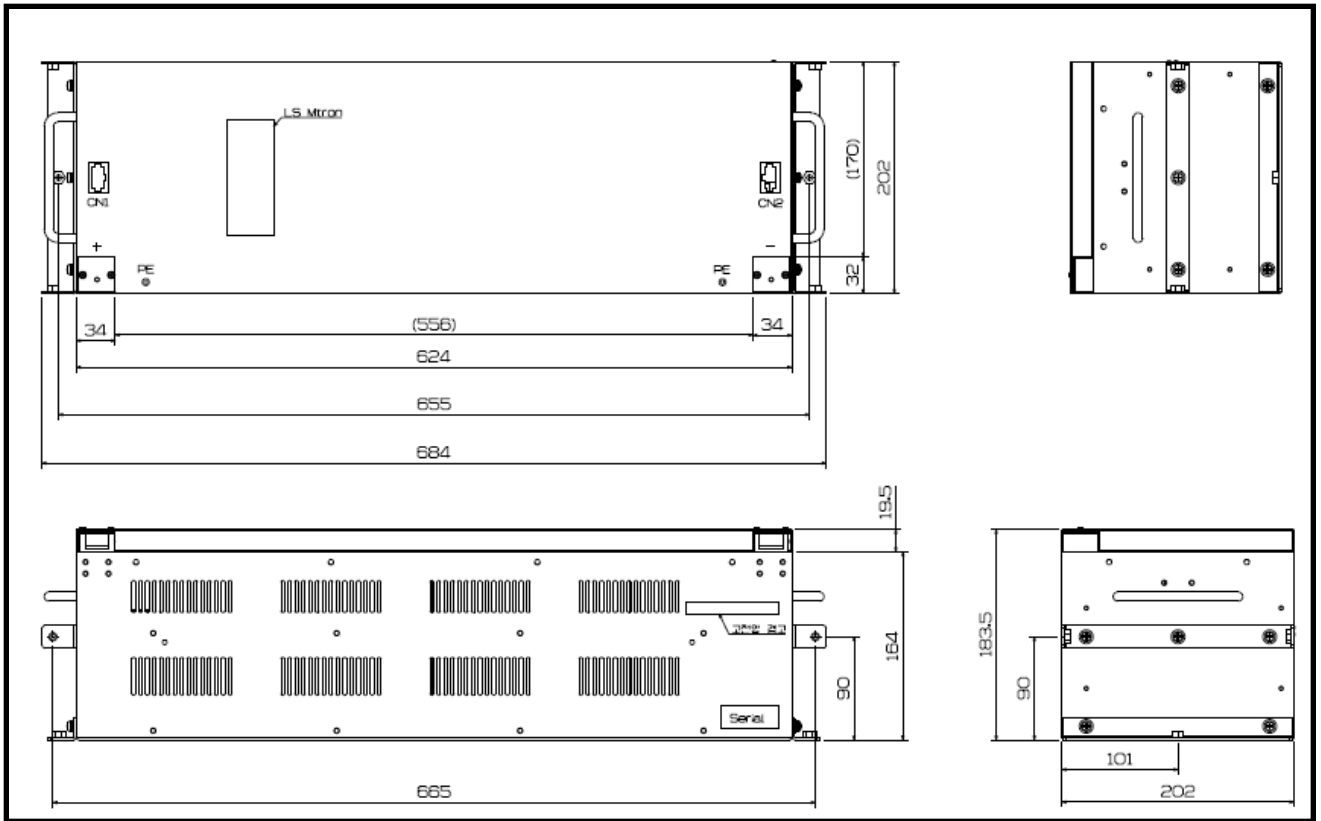

<Fig. 6> Mounting Positions

# User Manual

LSUM 162R4L 0015F EA

## 9. Maintenance

### Power Rating

If the applied voltage is over rated voltage, charging the module should be stopped. And the allowable low voltage level of the module depends on the user's requirements, but full discharging to 0V does not affect the module performance.

### Temperature

The module has its optimal operating temperature range of -40 to 65. Over 70°C, charging and discharging should be stopped to expect its performance and life cycle.

### Do not expose to direct sunlight

For installation do not make the module expose to direct sunlight due to temperature increase inside the module.

### Maintenance

The module has its expected life cycle over 10years at rated voltage and +25°C. However the life cycle of the module may be decreased in high temperature condition or over voltage charging.

If following abnormal module performances are detected, operation should be stopped and checking the electrical & mechanical connections is recommended.

- Monitoring high temperature in normal operating conditions
- Internal resistance increase or initial voltage drop increase
- Deformation of the module case

# User Manual

LSUM 162R4L 0015F EA

## 10. Contact Information

LS Ultracapacitor

LS Mtron

6F, LS Mtron Hi-Tech Center, 39, LS-Ro, 116beon-gil, Dongan-gu, Anyang-si,  
Gyeonggi-do 431-831, Korea

Tel. +82-31-8045-9579

Fax. +82-31-8045-9544

E-mail. [ultracapacitor@lsmtron.com](mailto:ultracapacitor@lsmtron.com)

# User Manual

LSUM 162R4L 0015F EA

## Appendix I

### Drawing

